

BLAUBOX EC MW


Supply ventilation units

Features

- Ventilation unit for efficient supply ventilation in various premises.
- Controllable air supply, heating and filtration.
- BMS connection via ModBUS RTU.



Air flow:
up to 4950 m³/h
1375 l/s

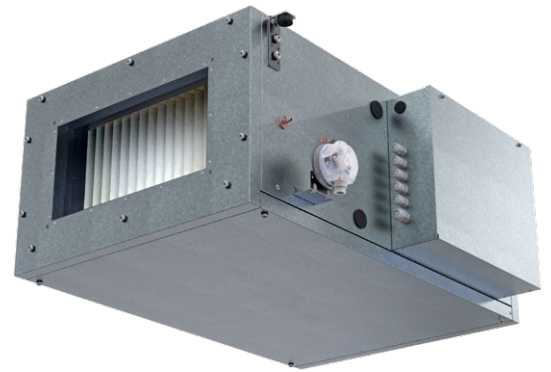


Design

- Steel casing covered with aluzinc coating internally filled with 30 mm heat- and sound-insulating layer made of mineral wool.
- Mounting brackets with anti-vibration rubber. Service panel ensures easy access to the internals.
- **Blaubox EC MW 700** is compatible with round ducts.




Blaubox EC MW 700

Blaubox EC ME 300 ... 700

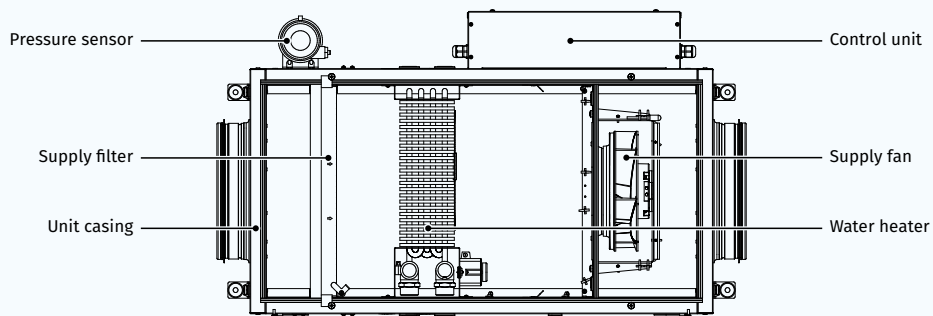

Blaubox EC ME 1000 ... 4000

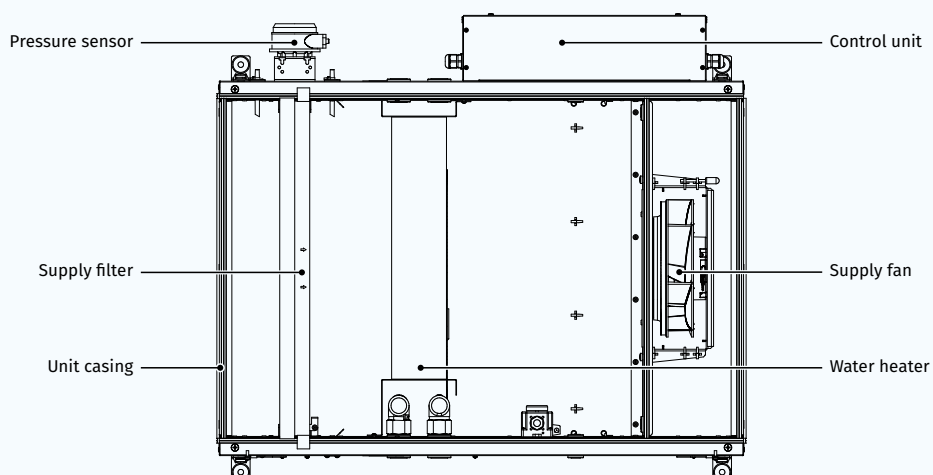

Fans

- o Efficient external rotor EC-motors and centrifugal impellers with backward curved blades.
- o EC-motors are featured with high performance, low noise level and totally controllable speed range.
- o Dynamically balanced impeller.

Air filtration

- o Panel Coarse 60% (G4) filter for supply air purification.
- o Panel ePM10 90% (F7) filter is available as an option.

Air heater

- o The unit is equipped with a water heater.
- o Integrated frost protection.



Mounting

- o The unit is suitable for indoor mounting on the floor, ceiling mounting or wall mounting with fixing brackets in any mounting position, except for the vertical one with air flow downwards.
- o The correct mounted unit must provide free access to the service panel.

Control and automation

- o The units are equipped with an S31 integrated automation control system.
- o Remote control panels are not included in the delivery set and ordered separately.

Automation functions

Functions	Description
Vired control panel	S30 
Vired control panel	S32 
Unit on / off	+
Fan speed control and setting	+
Filter clogging indication and control	Pressure sensor
Week schedule	+
Electric heater protection with auto restart	+
Electric heater protection with manual restart	+
Supply temperature control	+
Outer temperature sensor	+
Water heater frost protection	+
Return temperature sensor	+
Air damper control	+
Alarm indication	+
BMS Connection	ModBUS (RTU)
Humidity sensor	0-10V or NO
CO2 Sensor	0-10V or NO
Exhaust fan control	on / off
Three-way valve control	+
Circulation pump control	+
Condensing unit control	0-10V



Option: function is available when purchasing the appropriate accessory (see the "Accessories" section).

Designation key



Series	Motor type	Heater type	Rated air flow [m³/h]	Service side	Control
Blaubox: supply air unit	EC: electronically commutated motor	MW: water	300; 400; 700; 1000; 1500; 2000; 3000; 4000	L: left R: right	S31

Overall dimensions [mm]

Model	∅ D	H	H1	H2	L	L1	L2	L3	W	W1	W2	W3
Blaubox EC MW 700 S31	250	350	218	-	850	903	972	65	460	565	-	-
Blaubox EC MW 1000 S31	-	380	200	250	900	770	65	-	600	653	746	400
Blaubox EC MW 1500 S31	-	440	250	318	900	770	65	-	700	754	847	500
Blaubox EC MW 2000 S31	-	440	300	318	900	770	65	-	700	754	847	500
Blaubox EC MW 3000 S31	-	500	300	368	1200	1070	65	-	800	853	944	600
Blaubox EC MW 4000 S31	-	550	400	380	1200	1070	65	-	940	993	1087	700

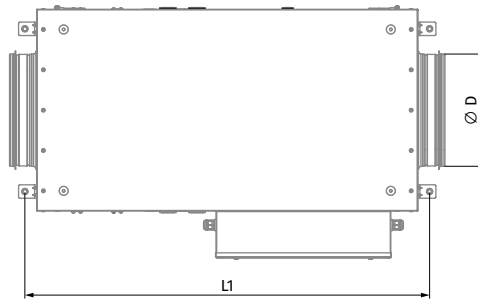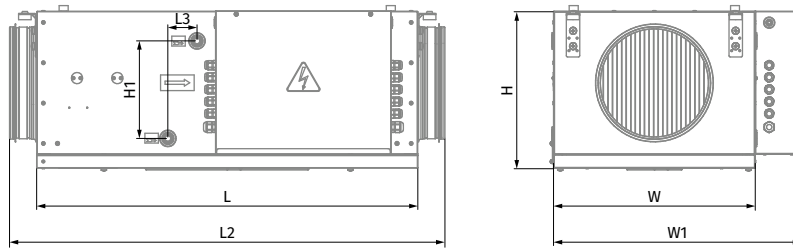

Blaubox EC MW 700

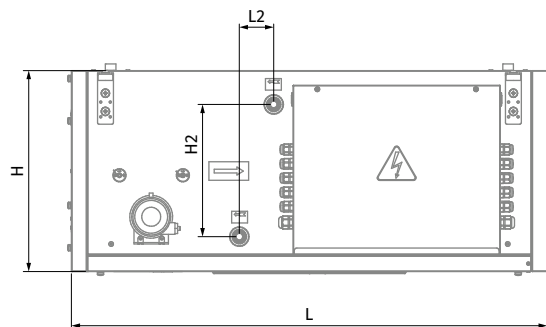
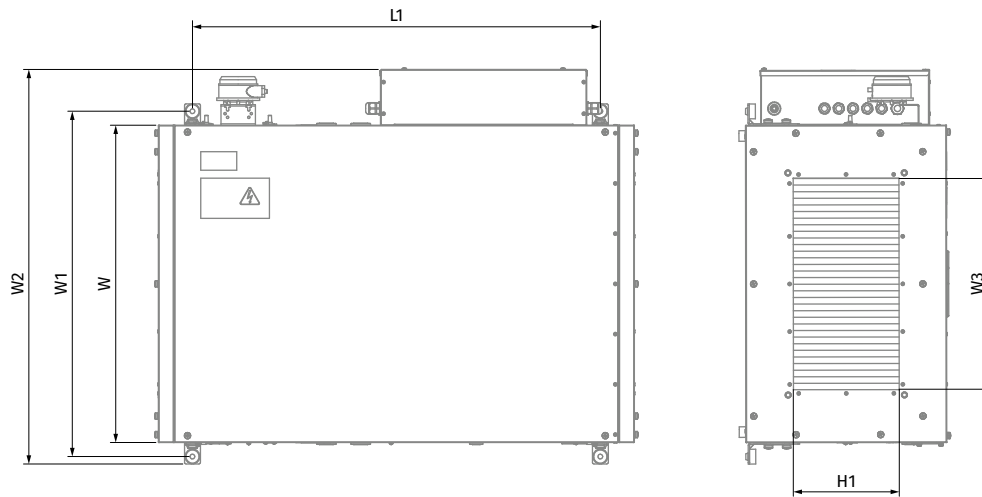


Blaubox EC MW 1000 – Blaubox EC MW 4000



Technical data

Parameters	Blaubox EC MW 700 S31	Blaubox EC MW 1000 S31
Supply Voltage [V / 50 Hz]	1 ~ 230	1 ~ 230
Number of water coil rows	4	4
Water coil connection diameter, "	3/4	1
Max. unit power [kW]	0.139	0.165
Max. unit current [A]	1.05	1.23
Maximum airflow [m³/h]	800	920
Max. water temperature [°C]	150	150
Sound pressure level at 3m [dBA]	44	48
Transported air temperature [°C]	-30...+40	-30...+40
Casing material	aluzinc	aluzinc
Insulation	30 mm mineral wool	30 mm mineral wool
Filter	Coarse 90% / G4 (option: ePM1 70% / F7)	Coarse 90% / G4 (option: ePM1 70% / F7)
Caonnected air duct diameter [mm]	250	400 x 200
Weight [kg]	27	35

BLAUBOX EC MW 700 S31

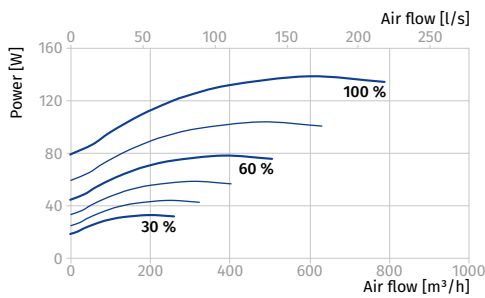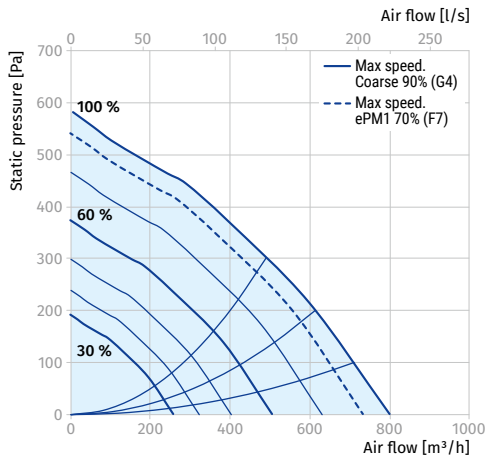





BLAUBOX EC MW 1000 S31

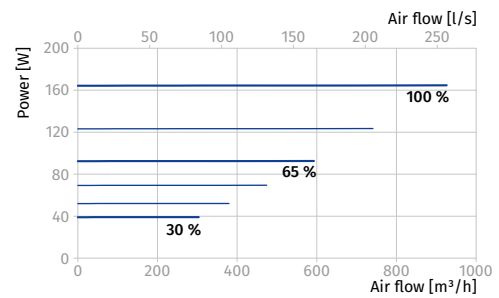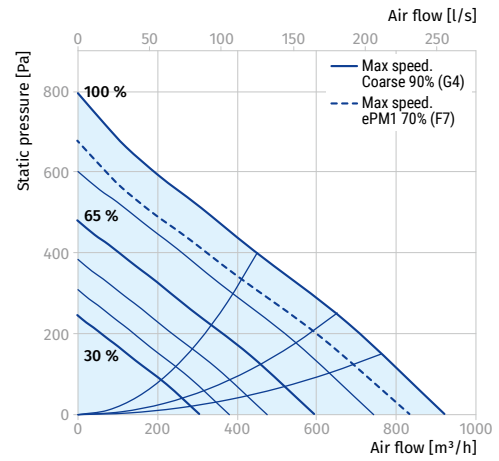

Parameters	Blaubox EC MW 1500 S31	Blaubox EC MW 2000 S31
Supply Voltage [V / 50 Hz]	1 ~ 230	1 ~ 230
Number of water coil rows	4	4
Water coil connection diameter, "	1	1
Max. unit power [kW]	0.222	0.387
Max. unit current [A]	1.6	1.7
Maximum airflow [m³/h]	1445	2150
Max. water temperature [°C]	150	150
Sound pressure level at 3m [dBA]	49	53
Transported air temperature [°C]	-30...+40	-30...+40
Casing material	aluzinc	aluzinc
Insulation	30 mm mineral wool	30 mm mineral wool
Filter	Coarse 90% / G4 (option: ePM1 70% / F7)	Coarse 90% / G4 (option: ePM1 70% / F7)
Caonnected air duct diameter [mm]	500 × 250	500 × 300
Weight [kg]	49	45



BLAUBOX EC MW 1500 S31

BLAUBOX EC MW 2000 S31

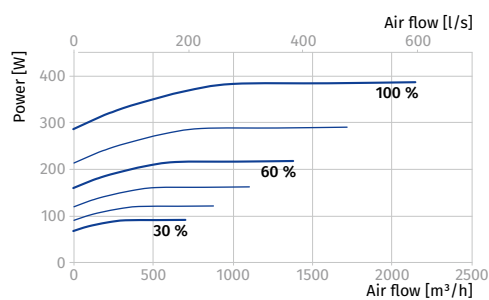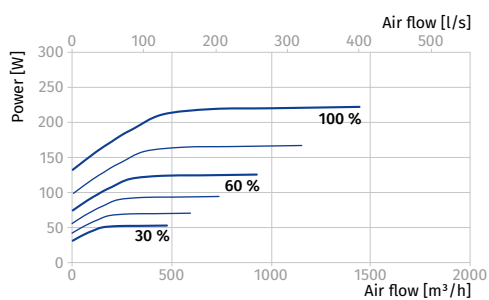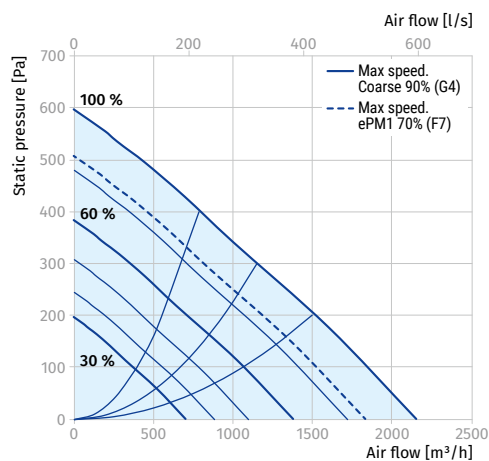
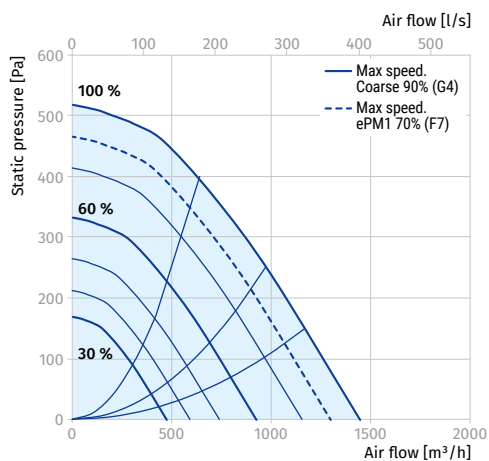


Parameters	Blaubox EC MW 3000 S31	Blaubox EC MW 4000 S31
Supply Voltage [V / 50 Hz]	1 ~ 230	1 ~ 230
Number of water coil rows	4	4
Water coil connection diameter, "	1 1/4	1 3/8
Max. unit power [kW]	0.425	0.698
Max. unit current [A]	1.8	1.06
Maximum airflow [m³/h]	2930	4950
Max. water temperature [°C]	150	150
Sound pressure level at 3m [dBA]	52	54
Transported air temperature [°C]	-30...+40	-30...+40
Casing material	aluzinc	aluzinc
Insulation	30 mm mineral wool	30 mm mineral wool
Filter	Coarse 90% / G4 (option: ePM1 70% / F7)	Coarse 90% / G4 (option: ePM1 70% / F7)
Caonnected air duct diameter [mm]	600 × 300	700 × 400
Weight [kg]	50	58

BLAUBOX EC MW 3000 S31

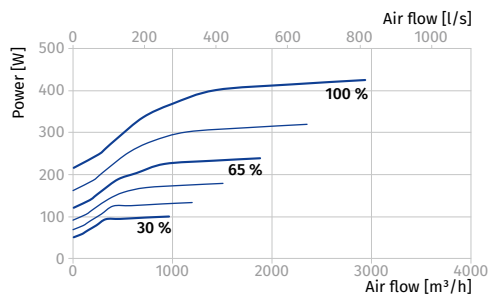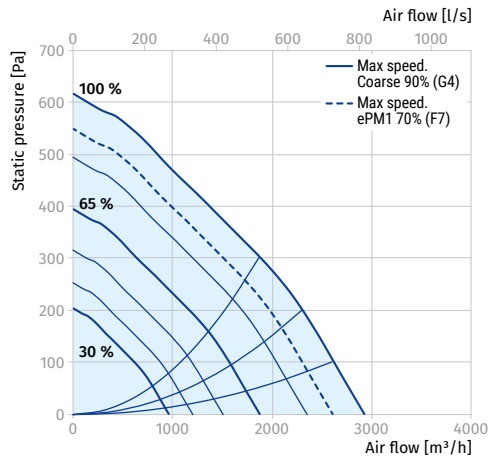


BLAUBOX EC MW 4000 S31

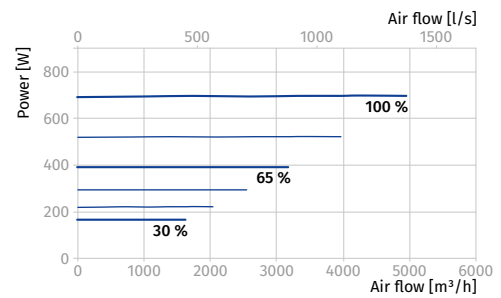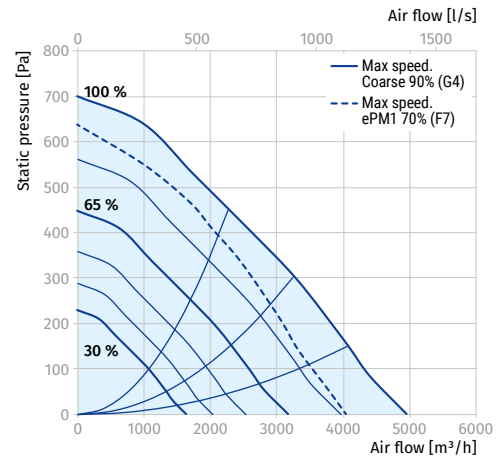

Hot water coil calculation diagram

BLAUBOX EC MW 700 S31

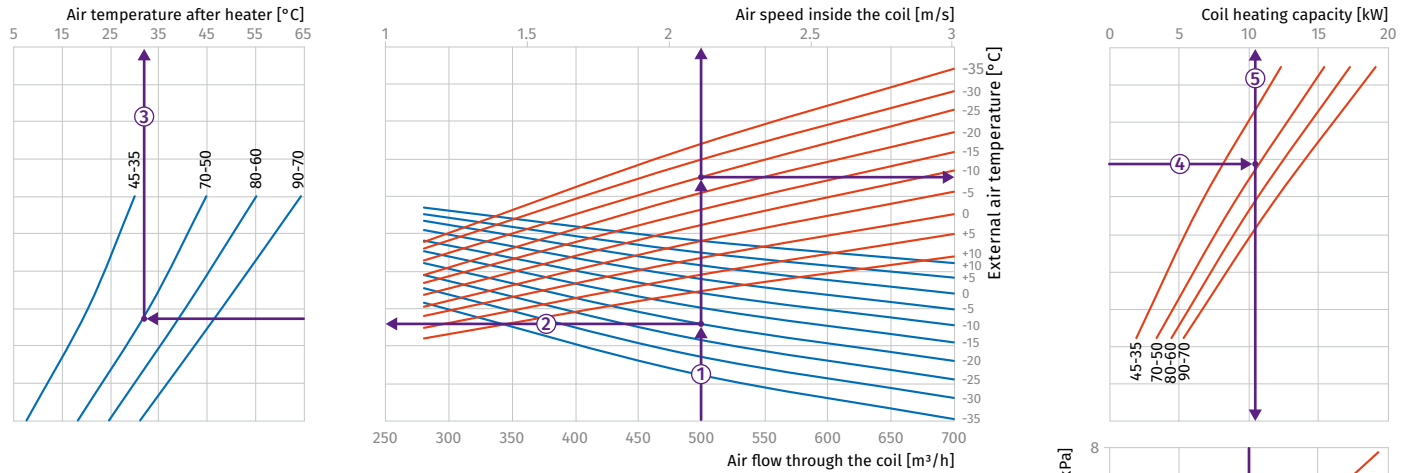


How to use water heater diagrams

- Air Speed. Starting from 500 m³/h on the air flow scale draw a vertical line ① till the air speed axis which makes about 2.1 m/s.
- Supply air temperature. Prolong the line ① up to the point where it crosses the outside air temperature (blue curve), e.g. -20 °C; then draw a horizontal line ② from this point to the left till crossing water in/out temperature curve (70/50 °C). From this point draw a vertical line ③ to the supply air temperature axis on top of the graphic (+31 °C).

- Heating coil capacity. Prolong the line ① up to the point where it crosses the outside air temperature -20 °C (red curve) and draw a horizontal line ④ from this point to the right until it crosses water in/out temperature curve (70/50 °C), from here draw a vertical line ⑤ up to the scale representing the heating coil capacity (11 kW).
- Water flow. Prolong the line ⑤ down to water flow axis at the bottom of the graphic ⑥ (600 kg/h).
- Water pressure drop. Draw the line ⑦ from the point where line ⑥ crosses the black curve to the pressure drop axis. (3 kPa).

BLAUBOX EC MW 1000 S31


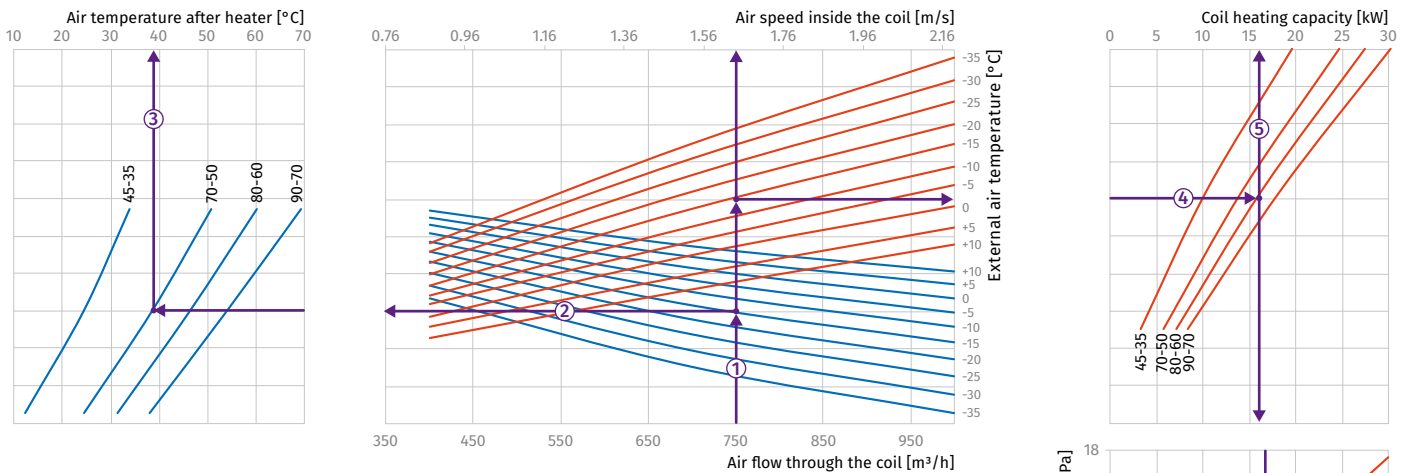


How to use water heater diagrams

- Air Speed. Starting from 750 m³/h on the air flow scale draw a vertical line ① till the air speed axis which makes about 1.6 m/s.
- Supply air temperature. Prolong the line ① up to the point where it crosses the outside air temperature (blue curve), e.g. -15 °C; then draw a horizontal line ② from this point to the left till crossing water in/out temperature curve (70/50 °C). From this point draw a vertical line ③ to the supply air temperature axis on top of the graphic (+39 °C).

- Heating coil capacity. Prolong the line ① up to the point where it crosses the outside air temperature -15 °C (red curve) and draw a horizontal line ④ from this point to the right until it crosses water in/out temperature curve (70/50 °C), from here draw a vertical line ⑤ up to the scale representing the heating coil capacity (16 kW).
- Water flow. Prolong the line ⑤ down to water flow axis at the bottom of the graphic ⑥ (1000 kg/h).
- Water pressure drop. Draw the line ⑦ from the point where line ⑥ crosses the black curve to the pressure drop axis. (6 kPa).

BLAUBOX EC MW 1500 S31

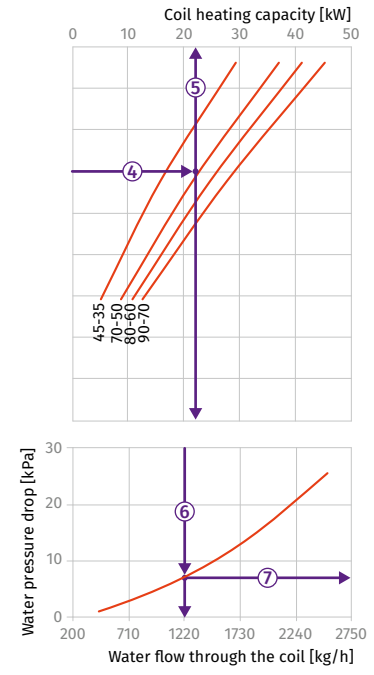
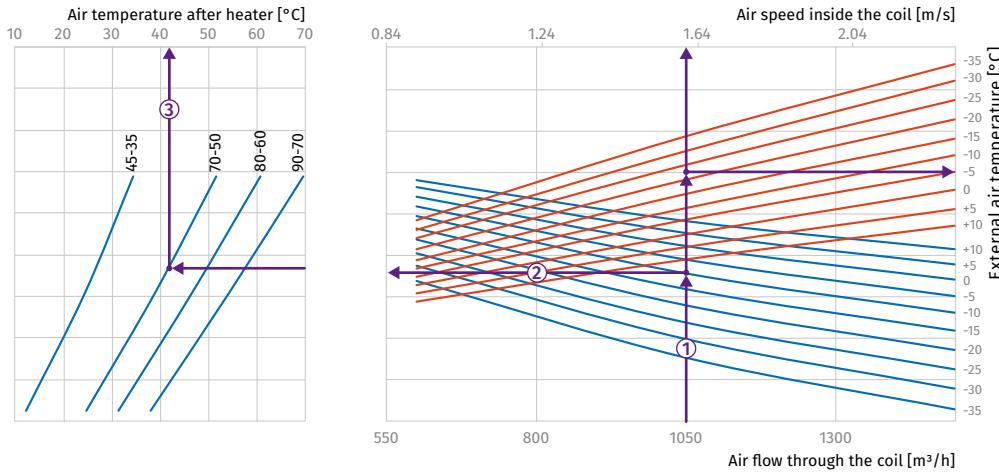


How to use water heater diagrams

- Air Speed. Starting from 1050 m³/h on the air flow scale draw a vertical line ① till the air speed axis which makes about 1.6 m/s.
- Supply air temperature. Prolong the line ① up to the point where it crosses the outside air temperature (blue curve), e.g. -10 °C; then draw a horizontal line ② from this point to the left till crossing water in/out temperature curve (70/50 °C). From this point draw a vertical line ③ to the supply air temperature axis on top of the graphic (+41 °C).

- Heating coil capacity. Prolong the line ① up to the point where it crosses the outside air temperature -15 °C (red curve) and draw a horizontal line ④ from this point to the right until it crosses water in/out temperature curve (70/50 °C), from here draw a vertical line ⑤ up to the scale representing the heating coil capacity (22 kW).
- Water flow. Prolong the line ⑤ down to water flow axis at the bottom of the graphic ⑥ (1220 kg/h).
- Water pressure drop. Draw the line ⑦ from the point where line ⑥ crosses the black curve to the pressure drop axis. (8.5 kPa).

BLAUBOX EC MW 2000 S31

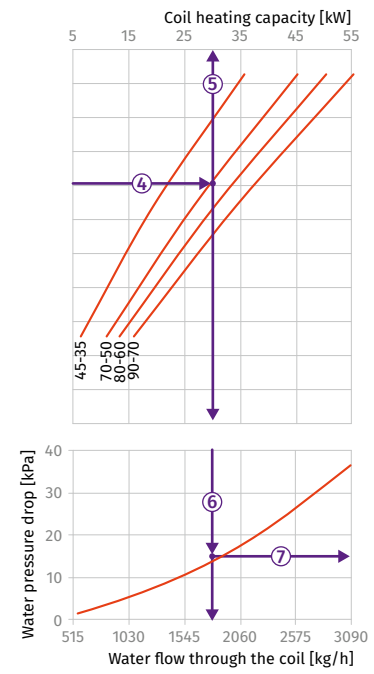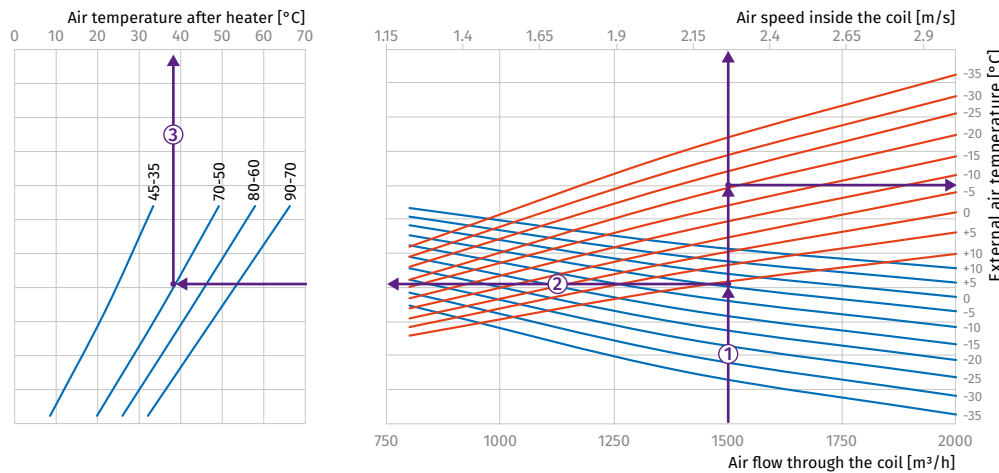


How to use water heater diagrams

- Air Speed. Starting from 1500 m³/h on the air flow scale draw a vertical line ① till the air speed axis which makes about 2.25 m/s.
- Supply air temperature. Prolong the line ① up to the point where it crosses the outside air temperature (blue curve), e.g. -5 °C; then draw a horizontal line ② from this point to the left till crossing water in/out temperature curve (70/50 °C). From this point draw a vertical line ③ to the supply air temperature axis on top of the graphic (+38 °C).

- Heating coil capacity. Prolong the line ① up to the point where it crosses the outside air temperature -15 °C (red curve) and draw a horizontal line ④ from this point to the right until it crosses water in/out temperature curve (70/50 °C), from here draw a vertical line ⑤ up to the scale representing the heating coil capacity (30 kW).
- Water flow. Prolong the line ⑤ down to water flow axis at the bottom of the graphic ⑥ (1750 kg/h).
- Water pressure drop. Draw the line ⑦ from the point where line ⑥ crosses the black curve to the pressure drop axis. (15 kPa).

BLAUBOX EC MW 3000 S31

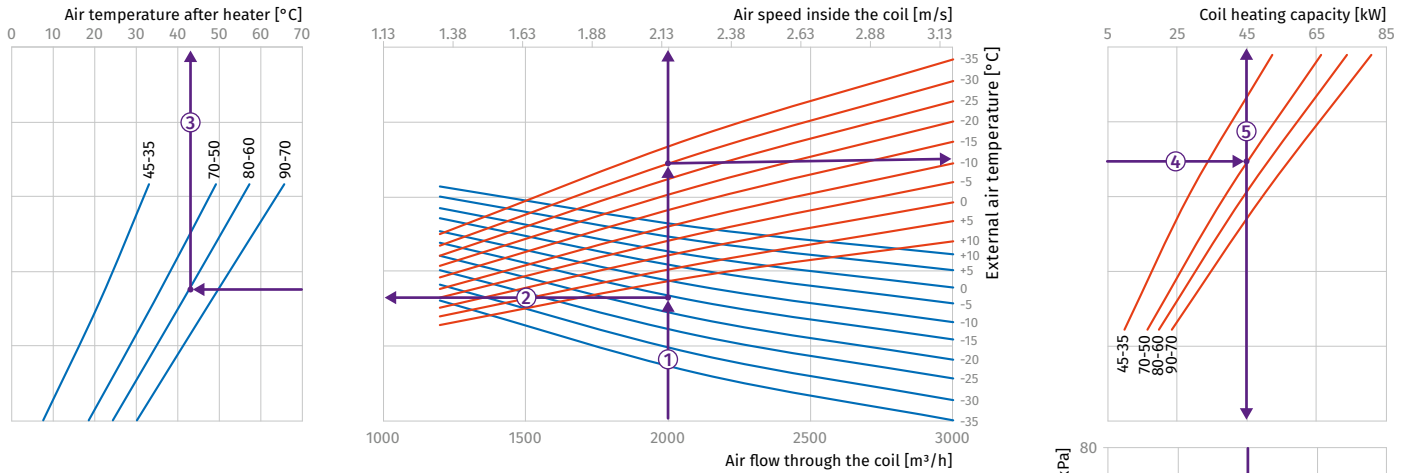


How to use water heater diagrams

- Air Speed. Starting from 2000 m³/h on the air flow scale draw a vertical line ① till the air speed axis which makes about 2.2 m/s.
- Supply air temperature. Prolong the line ① up to the point where it crosses the outside air temperature (blue curve), e.g. -15 °C; then draw a horizontal line ② from this point to the left till crossing water in/out temperature curve (80/60 °C). From this point draw a vertical line ③ to the supply air temperature axis on top of the graphic (+43 °C).

- Heating coil capacity. Prolong the line ① up to the point where it crosses the outside air temperature -15 °C (red curve) and draw a horizontal line ④ from this point to the right until it crosses water in/out temperature curve (70/50 °C), from here draw a vertical line ⑤ up to the scale representing the heating coil capacity (45 kW).
- Water flow. Prolong the line ⑤ down to water flow axis at the bottom of the graphic ⑥ (2650 kg/h).
- Water pressure drop. Draw the line ⑦ from the point where line ⑥ crosses the black curve to the pressure drop axis. (24 kPa).

BLAUBOX EC MW 4000 S31

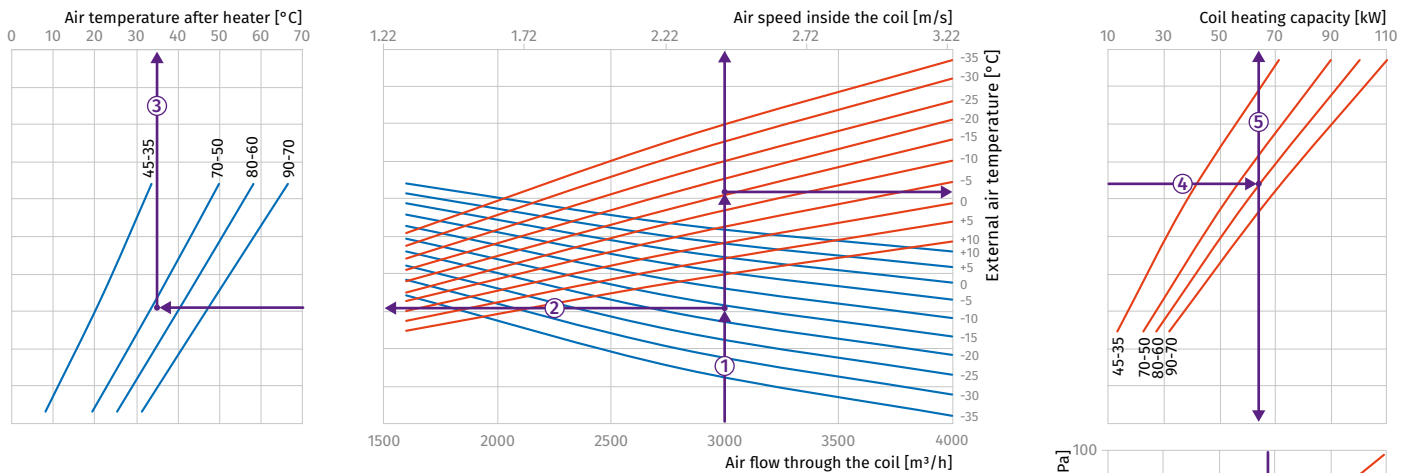






How to use water heater diagrams

- Air Speed. Starting from 3000 m³/h on the air flow scale draw a vertical line ① till the air speed axis which makes about 2.5 m/s.
- Supply air temperature. Prolong the line ① up to the point where it crosses the outside air temperature (blue curve), e.g. -15 °C; then draw a horizontal line ② from this point to the left till crossing water in/out temperature curve (70/50 °C). From this point draw a vertical line ③ to the supply air temperature axis on top of the graphic (+35 °C).

- Heating coil capacity. Prolong the line ① up to the point where it crosses the outside air temperature -20 °C (red curve) and draw a horizontal line ④ from this point to the right until it crosses water in/out temperature curve (80/60 °C), from here draw a vertical line ⑤ up to the scale representing the heating coil capacity (65 kW).
- Water flow. Prolong the line ⑤ down to water flow axis at the bottom of the graphic ⑥ (4100 kg/h).
- Water pressure drop. Draw the line ⑦ from the point where line ⑥ crosses the black curve to the pressure drop axis. (45 kPa).

Accessories

		Blaubox EC MW 700	Blaubox EC MW 1000	Blaubox EC MW 1500	Blaubox EC MW 2000	Blaubox EC MW 3000	Blaubox EC MW 4000
Panel filter G4		FP 384x287x48 Coarse 90% / G4	FP 536x316x48 Coarse 90% / G4	FP 536x316x48 Coarse 90% / G4	FP 636x376x48 Coarse 90% / G4	FP 734x435x80 Coarse 90% / G4	FP 874x485x80 Coarse 90% / G4
Panel filter F7		FP 384x287x48 ePM1 70% / F7	FP 536x316x48 ePM1 70% / F7	FP 536x316x48 ePM1 70% / F7	FP 636x376x48 ePM1 70% / F7	FP 384x287x48 ePM1 70% / F7	FP 874x485x80 ePM1 70% / F7
Flexible anti-vibration connector		EVA 250	EVA 40x20	EVA 50x25	EVA 50x30	EVA 60x30	EVA 70x40
Silencer		SD 250	SD 40x20	SD 50x25	SD 50x30	SD 60x30	SD 70x40
Air damper		VKA 250	SL 40x20	SL 50x25	SL 50x30	SL 60x30	SL 70x40
Air damper electric actuator		TF230 / TF24	TF230 / TF24	TF230 / TF24	TF230 / TF24	TF230 / TF24	TF230 / TF24